



BATTERY COMPARTMENT ON BACK SIDE OF REMOTE CONTROL.

Low battery
The low battery symbol will appear in the display window when the low battery condition exists.

In this case after each command, the "low voltage symbol" flickers for 2 seconds. In these 2 seconds the remote control is not able to send other commands.

Replace the batteries
2x1.5V AAA

Configuring the remote control




For models:
B1600 - B2200



For models:
FRESHLIGHT

Note: Press RESET and reset the clock after each modification.

**AIRCONDITIONERS
REMOTE CONTROL**

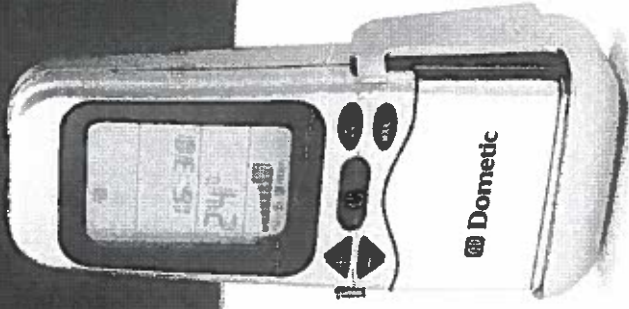

USER'S GUIDE

