










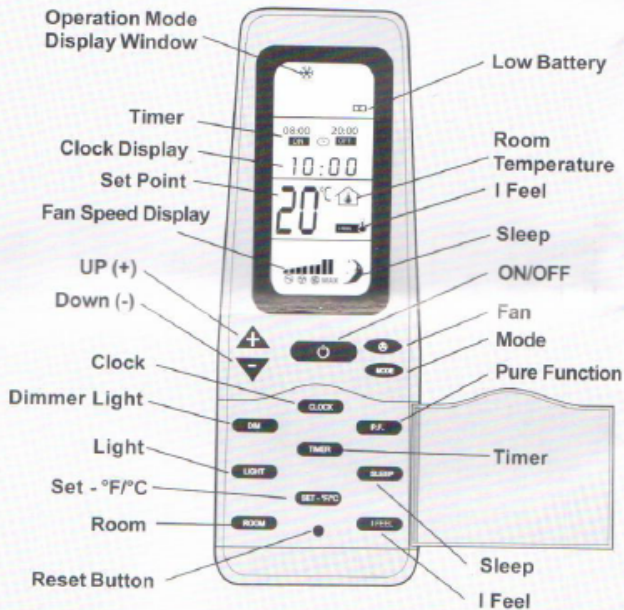


REMOTE CONTROL



The RESET button erases all the configuration parameters to default.
Light, I Feel and Dimmer Light available only for compatible model

 BUTTON DESCRIPTION



 ON/OFF	Press the ON/OFF button to start the airconditioner. When it's OFF all the symbols are OFF, except the clock and you can use the ROOM and the LIGHT buttons.
 PURE FUNCTION	Pressing this button it is possible to enable or disable the PURE FUNCTION.
 DIMMER LIGHT	Pressing this button it is possible to modify the air conditioner light level. To modify the light level pressing the "+" and "-" buttons.
 LIGHT**	Pressing the light key the light on the airconditioner diffuser is switched on (if equipped). The light button works also when the remote control is off.
 ROOM	Pressing this button the room symbol is displayed and the local temperature is displayed instead the set point. Pressing the Room button another time the Room symbol disappear and the set point temperature is displayed instead the local one. This button works also when the remote control is off.
 CLOCK	Pressing the "CLOCK" button for a time longer than 2 seconds, it is possible to modify the "TIME SETTING", managing the UP (+) button or the DOWN (-). Press the "SET" button to confirm the modifications. After 15 seconds the new set is confirmed in any cases.
 SET - °F/°C	°F/°C: Choose the temperature measurement unit between Celsius (°C) or Fahrenheit (°F). If temperature is displayed this function is enabled. SET: 1) To confirm the TIME SETTING 2) To resend the actual operating setting
 TIMER	Press this button to set the time of automatic startup and/or shutdown.
 SLEEP	Press this button to activate the SLEEP function. The set point is adjusted automatically to increase comfort when sleeping.
 I FEEL	Every 10 minutes the operating set point is adjusted to the temperature detected by the remote control.

 Press the ON/OFF button to start the airconditioner



AUTOMATIC MODE






	Press the MODE button. Set to "AUTO"
	Choose the Set Point available only for compatible model
In this mode the fan button is disabled. You can use the LIGHT and ROOM button.	



COOL / HEAT MODE





	Press the MODE button. Set to "COOL" or "HEAT"
	Choose the Set Point
	Choose the Fan Speed
You can use the LIGHT and ROOM button.	

Available Fan speeds




FAN MODE




	Press the MODE button. Set to "FAN"
	Choose the Fan Speed
You can use the LIGHT and ROOM button. SPEED4: available only for compatible model	



ACTIVE VENTILATION

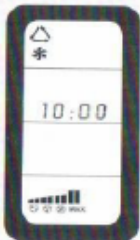

	Press the MODE button. Set to "ACTIVE VENTILATION" available only for compatible model
In this mode the fan button is disabled. You can use the LIGHT and ROOM button.	



DEHUMIDIFY MODE



MODE

Press the MODE button.
Set to "dehumidify"



Choose the Set Point

In this mode the fan button is disabled.
You can use the LIGHT and ROOM button.

08:00 20:00
ON OFF

TIMER

Note: Every time the timer button is pressed, the display flashes for 15 seconds while waiting for the settings to be modified. Remember to set the clock to the correct time before using this function.

Setting the "ON" timer (automatic startup)

- 1) Press the TIMER button and the ON clock will start to flash.
- 2) Set the time required using the + and - buttons
- 3) Point the remote control at the receiver and press the "SET" button to confirm

Setting the "OFF" timer (automatic shutdown)

- 1) Press the TIMER button twice and the OFF clock will start to flash.
- 2) Set the time required using the + and - buttons
- 3) Point the remote control at the receiver and press the "SET" button to confirm

Setting the "ON" & "OFF" timer (Automatic on/off)

- 1) Press the TIMER button three times and the ON clock will start to flash while the OFF clock is visible.
- 2) Set the required ON time using the + and - buttons
- 3) Press the TIMER button and set the required OFF time using the + and - buttons
- 4) Point the remote control at the receiver and press the "SET" button to confirm



SLEEP

- 1) Select the required temperature.
- 2) Press the SLEEP button

Note: The SLEEP function lowers the set temperature by 1° after one hour and by 2° after two hours.




I FEEL

- 1) Press the I FEEL button to enable the function.
- 2) Position the remote control so that it is possible to send signals to the receiver.
- 3) The operating temperature is adjusted to the temperature detected by the remote control.

Note: The remote control must not be in an area that is much warmer or much cooler than the normal room temperature (e.g.: exposed to direct sunlight or to the cold air coming from the diffuser.)



BATTERY COMPARTMENT ON BACK SIDE OF REMOTE CONTROL

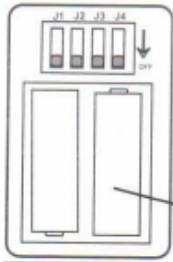

Low battery

The low battery symbol will appear in the display window when the low battery condition exists.

In this case after each command, the "low voltage symbol" flickers for 2 seconds. In these 2 seconds the remote control is not able to send other commands.

Replace the batteries
2x1.5V AAA

 
Configuring the remote control



For models:
B1600 - B2200



For models:
Freshjet



For models:
FRESHLIGHT



For models:
FreshWell 3000

Note: Press RESET and reset the clock after each modification.

